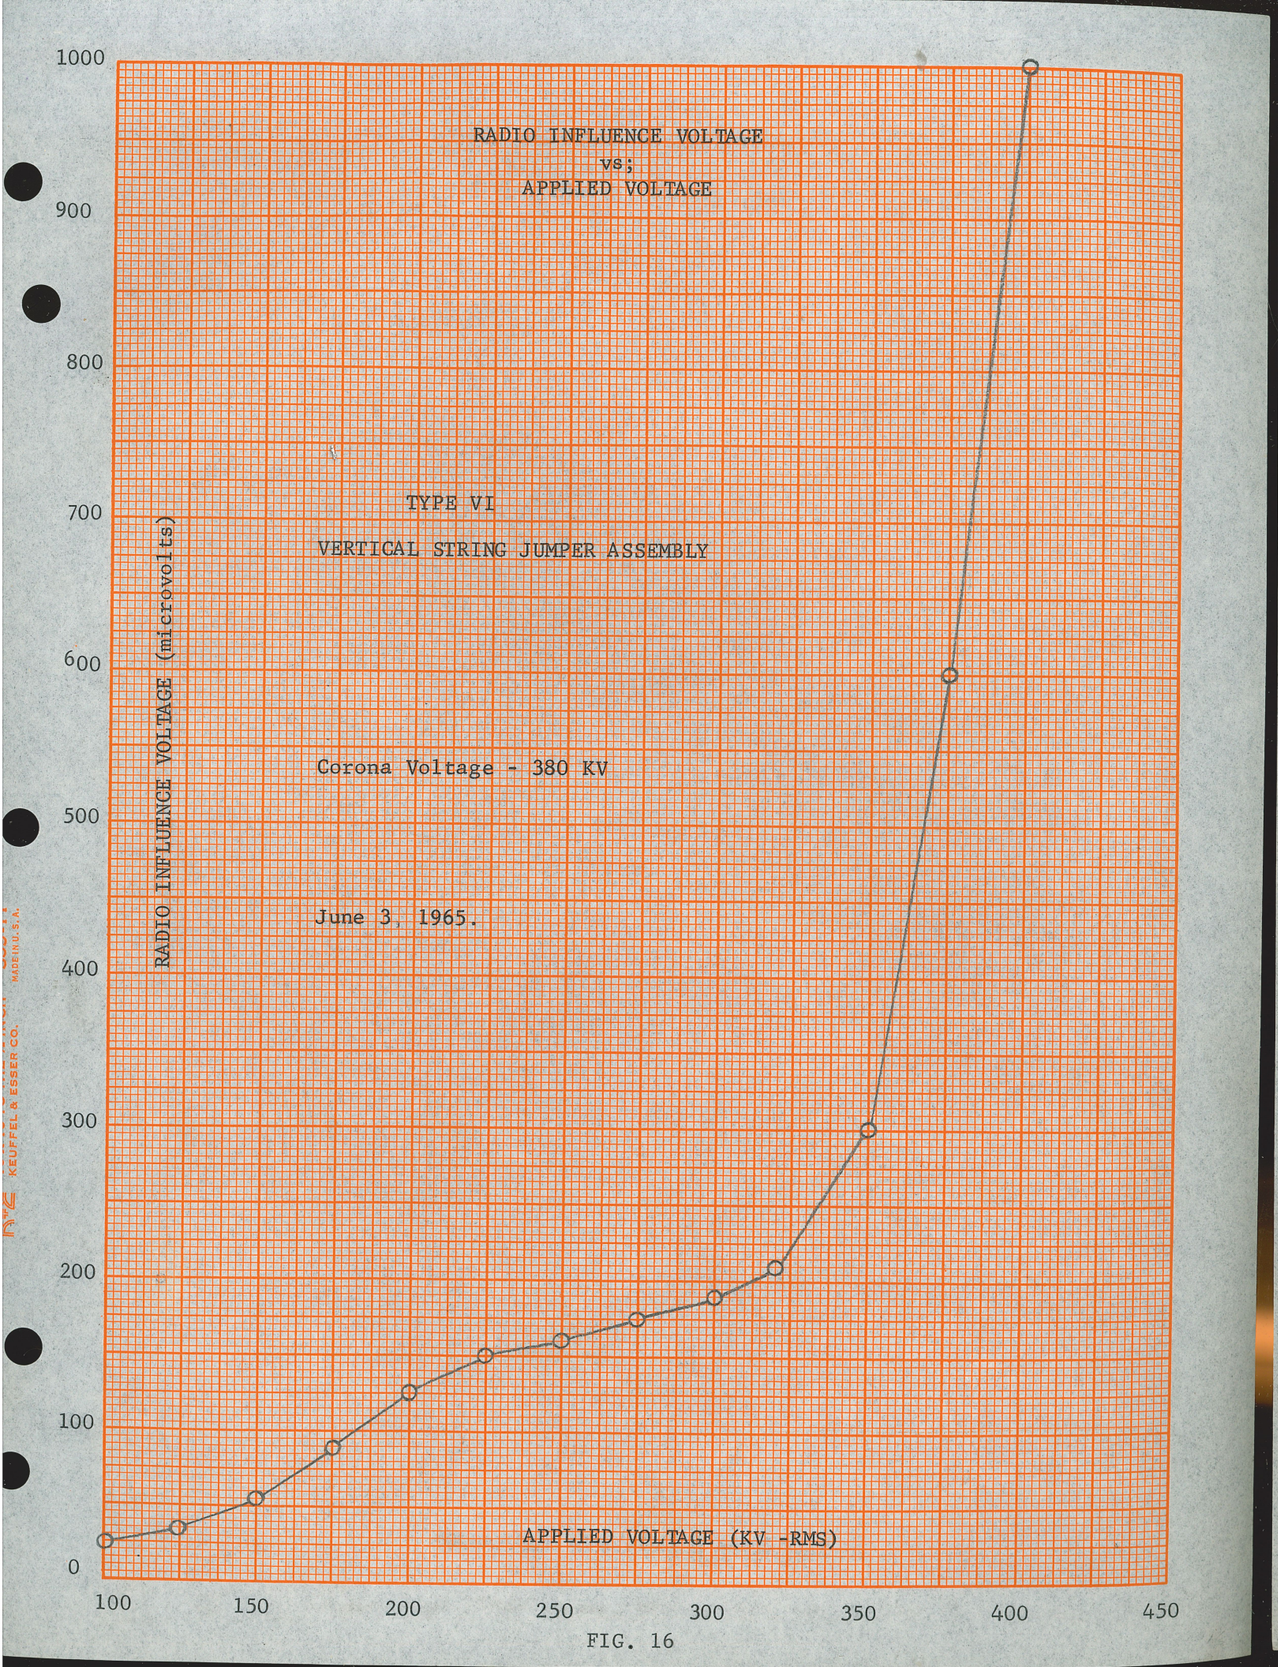
RADIO INFLUENCE VOLTAGE
vs;
APPLIED VOLTAGE
TYPE VI
VERTICAL STRING JUMPER ASSEMBLY
Corona Voltage - 380 KV
June 3, 1965.
RADIO INFLUENCE VOLTAGE (microvolts)
APPLIED VOLTAGE (KV -RMS)
1000
900
800
700
600
500
400
300
200
100
0
100
150
200
250
300
350
400
450
KEUFFEL & ESSER CO. MADE IN U.S.A.

FIG. 16

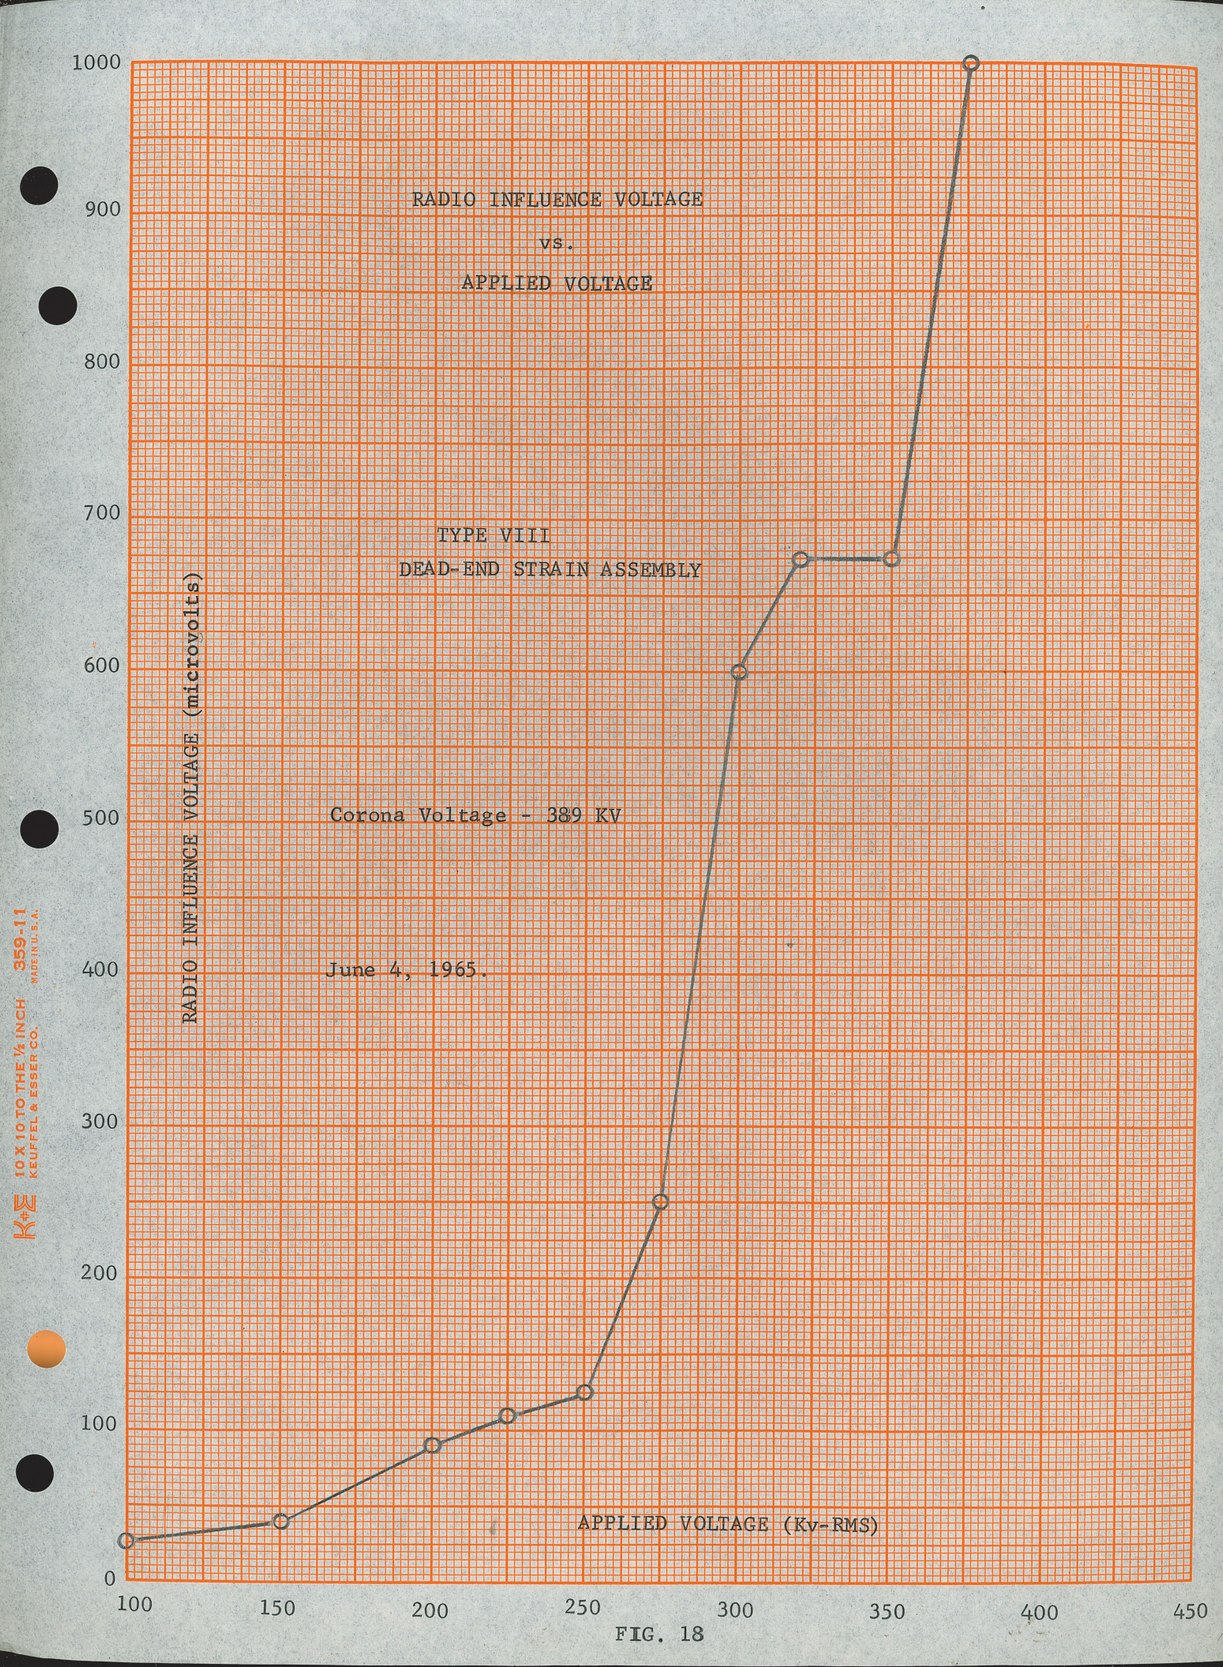
RADIO INFLUENCE VOLTAGE
vs.
APPLIED VOLTAGE
TYPE VIII
DEAD-END STRAIN ASSEMBLY
Corona Voltage - 389 KV
June 4, 1965.
RADIO INFLUENCE VOLTAGE (microvolts)
APPLIED VOLTAGE (Kv-RMS)
1000
900
800
700
600
500
400
300
200
100
0
100
150
200
250
300
350
400
450
10 X 10 TO THE ¼ INCH 359-11
KEUFFEL & ESSER CO. MADE IN U.S.A.

FIG. 18